



Removal

- | | |
|--------------------------|---|
| Engine hood..... | open and position vertical. |
| Fastening clips (1)..... | remove using special tool, part no. 140 589 18 63 00. |

Note

Insert special tool as far as the stop, turn downwards 90° and remove fastening clips.

Washer nozzles (2)..... pull downwards.
 Washing agent hose (3)..... detach.
 Plug (4) for nozzle heating..... detach.

Installation

Washing agent hose (3)..... push on.
 Plug for nozzles heating (4)..... plug in.
 Washer nozzle (2)..... insert with the retaining lugs first.
 Fastening clips (1)..... press in up to point of engagement.
 Engine hood..... close.
 Function check..... perform.
 Adjustment..... if required, correct using special tool, part no. 110 589 02 63 00.



Washer nozzles are basically adjusted by the manufacturer. Note correct location (left, right, central) in accordance with the parts microfiche.

Special tools

