

F1	Fuse and relay box	
F1-C	Fuse C, terminal 30	8L
F1-1	Fuse 1, terminal 15R	9L
M14/2	Supply pump (central locking system/orthopedic backrest)	7M
M14/2x1	Supply pump voltage supply connector (central locking system/orthopedic backrest)	7K
M14/2x2	Supply pump control line connector (central locking system/orthopedic backrest)	6K
N26	Anti-theft alarm control module	4M
N57	Convenience control module (power windows, sliding/pop-up roof)	4A
S8/2	Warning buzzer contact (exterior lamps/central locking system)	14M
S8/2x1	Warning buzzer contact connector (exterior lamps/central locking system)	13K
S17/11	Left door switch (seat belt extender, entrance/exit lamp)	16M
S22	Left front power seat switch	18M
S47	Left front door actuator	12M
S48	Right front door actuator	13M
S49	Trunk lid lock actuator	11M
S59	Adjustable steering column switch	19M
S62/1	Left front door switch (ATA)	2M
S62/1x1	Left door switch connector (ATA)	2K
S62/2	Right door switch (ATA)	3M
S62/2x1	Right door switch connector (ATA)	3K
S88/2	Trunk lid lock switch (convenience)	1M

S88/2x1	Trunk lid lock switch connector (convenience)	1K
U13	Valid for Coupé	
U21	Valid for sedan	
W1	Main ground (behind instrument cluster)	
W12	Ground (center console)	
*U97	Grounds not indicated, components are connected on engine block or bodywork	
X30	Accessory equipment connector block	10M 17M
X43	Anti-theft alarm connector (central locking system) (3-pole)	11G
Z7/16	Terminal 30 connector sleeve (accessory equipment connector block)	10H
Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be Shown framed.		
Explanations and Notes of Wiring Diagram see Section 00-A Locations/Connections/Overview see Section 00-B/00-C		

