

A1	Instrument cluster	19A	E3x1	Left taillamp unit connector	10K	R3r1	Heating element	35M
A1e1	Left turn signal indicator lamp	5A	E4	Right taillamp unit	9M 11M	S1	Exterior lamp switch	37M
A1e2	Right turn signal indicator lamp	4A	E4e1	Turn signal lamp	9M 12M	S4	Combination switch	4M
A1e3	High beam indicator lamp	2A	E4x1	Right taillamp unit connector	11K	S4s1	Turn signal switch	4M
A1e4	Fuel reserve indicator lamp	15A	E6/1	Left turn signal/side marker lamp (USA)	4M	S4x1	Combination switch connector	4I
A1e5	Generator charge indicator lamp	17A	E6/1e1	Turn signal	5M	S6	Hazard flasher switch	2M
A1e6	Brake pad wear indicator lamp	23A	E6/1e2	Side marker lamp (USA)	5M	S10/1	Left front brake pad wear sensor	22M
A1e7	Low brake fluid level/parking brake indicator lamp	23A	E6/2	Right turn signal/side marker lamp (USA)	7M	S10/1x1	Left front brake pad wear sensor connector	22I
A1e8	Instrument illumination	32A	E6/2e1	Turn signal	7M	S10/2	Right front brake pad wear sensor	20M 22M
A1e11	Low ECL indicator lamp	26A	E6/2e2	Side marker lamp (USA)	7M	S10/2x1	Right front brake pad wear sensor connector	22I
A1e12	Low engine oil level indicator lamp	25A	F1	Fuse and relay box		S10/3	Left rear brake pad wear sensor	19M
A1e13	Low windshield washer fluid level indicator lamp	29A	F1-1	Fuse 1, circuit 15R	36L	S10/4	Right rear brake pad wear sensor	19M
A1e14	Exterior lamp failure indicator lamp	1A	F1-3	Fuse 3, circuit 58R	39L	S11	Brake fluid level switch	23M
A1h1	Warning buzzer	34A	F1-5	Fuse 5, circuit 15	2L 39L	S12	Parking brake switch	24M
A1h2	Audible turn signal indicator	4A	F1-6	Fuse 6, circuit 15	17L	S41	ECL switch	26M 27M
A1p1	ECT gauge	13A	F1-9	Fuse 9, circuit 30	32L	S42	Windshield washer fluid level switch	27M 29M
A1p2	Fuel level gauge	15A	F1-16	Fuse 16, circuit 56a	2L	S43	Oil level switch	25M
A1p3	Engine oil pressure gauge	31A	N2/4	Seat belt warning module (USA)	33M	U13	Valid for Coupé	
A1r1	Instrument illumination rheostat	33A	N7	Exterior lamp failure monitoring module	1M 6M 17M 36M	U21	Valid for sedan	
A2/4	Radio control module	34M	N40	Audio power amplifier (circuit 58D)	32M	U22	Valid for station wagon	
B4	Fuel level sensor	14M 15M	M5/1	Windshield washer pump	30M	U23	Valid for cabriolet	
B5	Oil pressure sensor	31M	R3	Front cigar lighter (with ashtray illumination)	35M	W1	Main ground (behind instrument cluster)	
B13	ECT gauge sensor	13M	R3e1	Illumination	34M	W2	Ground (at right headlamp unit)	
E3	Left taillamp unit	8M 11M				W6	Ground (left wheelhousing in trunk)	
E3e1	Turn signal lamp	8M 11M				W7	Ground (right wheelhousing in trunk)	

W10	Ground (battery)	
W12	Ground (center console)	
W14	Ground (ABS hydraulic unit bracket)	
	Ground location without designation, component grounded directly on engine, chassis or body.	
X4/10	Terminal block (circuit 30/circuit 61 battery) (3-pole)	18F
X6/1	Terminal block (circuit 58d) (1- or 2-pole)	32H
X6/2	Connector (circuit 58R) (1-pole) I	6I
X18	Interior/taillamp harness connector (8-pole)	9G 15F
X24	Headlamp harness connector	4G 5G
X25	Preglow harness connector	13H
X26	Interior/engine connector (12-pole)	13F 30G
X26/20	Engine/chassis connector (ECT sensor) (4-pole)	12F
X27	Starter harness connector	24F 31H
X62/3	Rear axle VSS sensor connector (ASR) (6-pole)	19H
X62/8	Rear axle multiple circuit junction connector	18I
X88/5	Left front brake pad wear sensor intermediate connector	20I
Z81	Circuit 58d connector sleeve	32G
	Cross Section of Wire may differ from Values shown in Wiring Diagram. Changes in Cross Section of Wire will be shown framed.	

Explanations and Notes of Wiring Diagram see
Section 00-A
Locations/Connections/Overview see Section 00-B/00-C



